


STORAGE CABINETS


Necessary tools for assembly:

a star screwdriver


Your Package Should Contain:

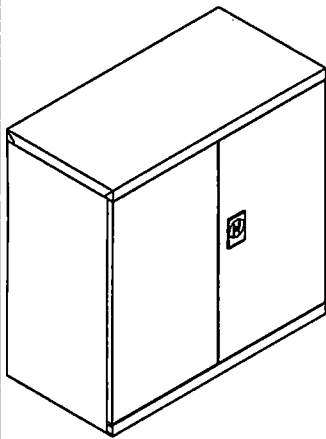


XB82-ZW




C1




side1
B1




Back1
A1

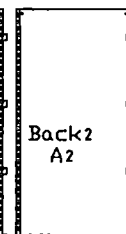

Back2
A2



side2
B2



C2



x4




x4




x18




x2




x4




Inside of Top
D




Inside Bottom
E




x2



Inside Face Place
F



Outer Face Place
G




H1

x2


H2

x2


step1

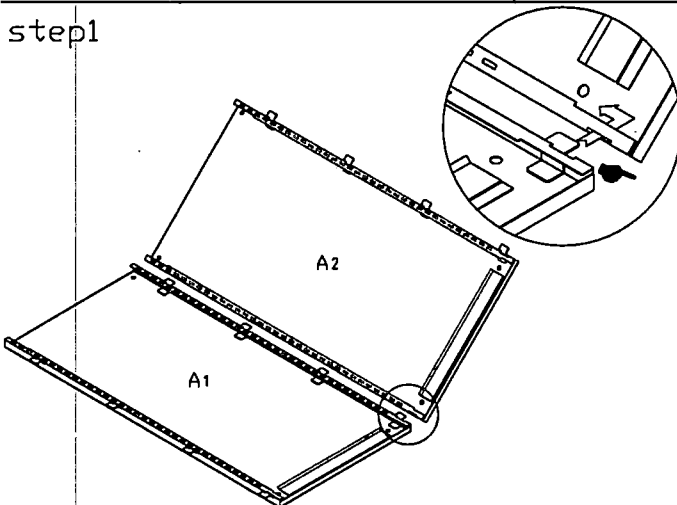


step2

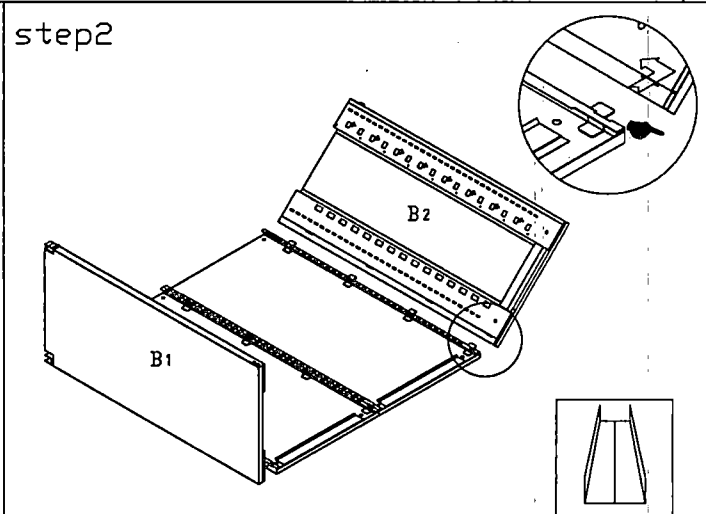


step3

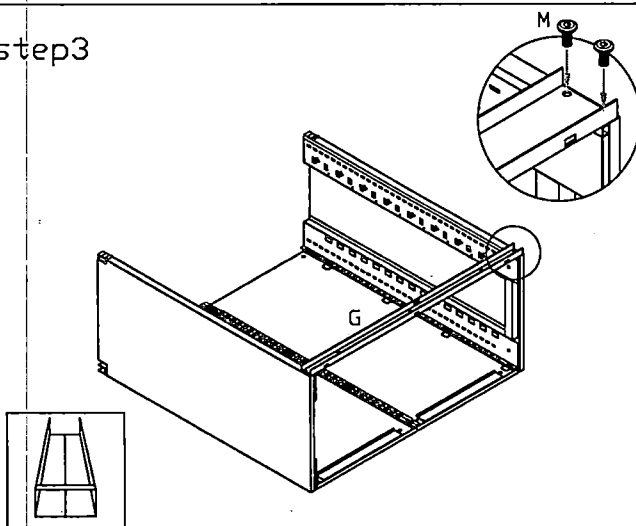


step4

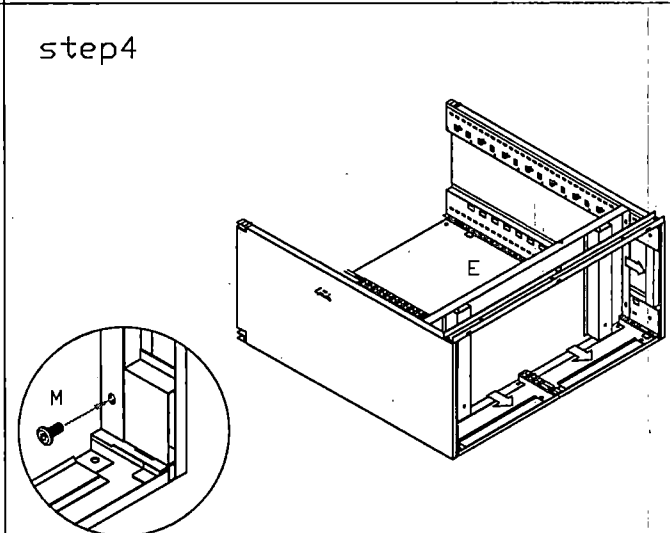


step5

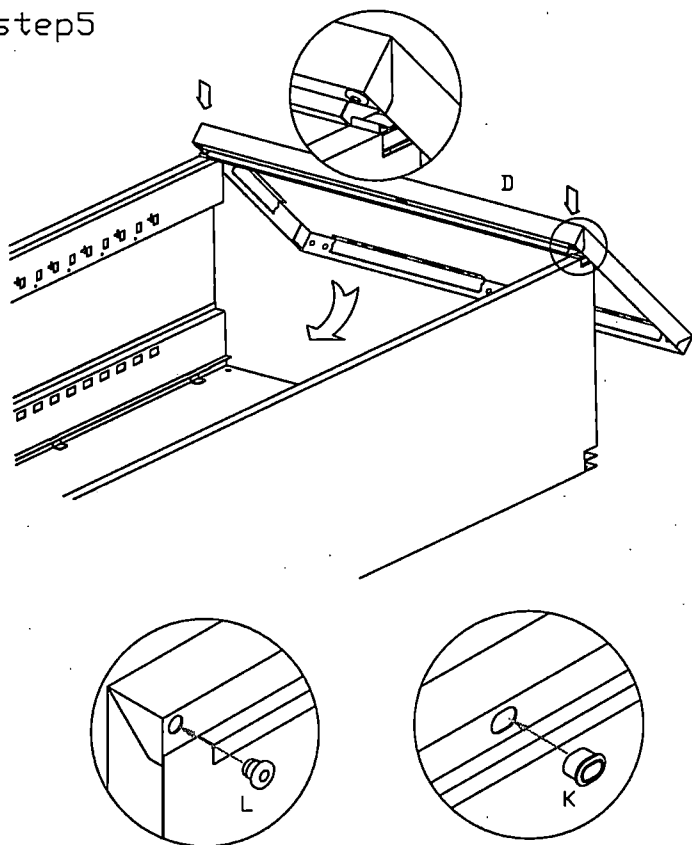


step6

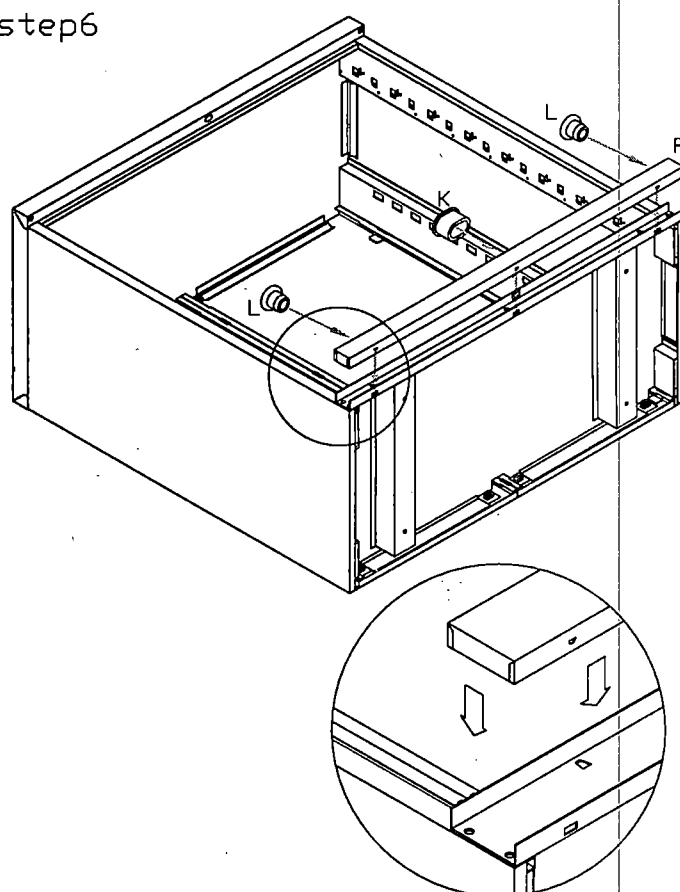

step7

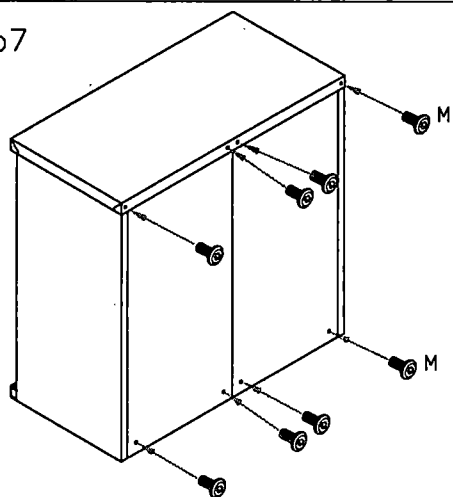

step9

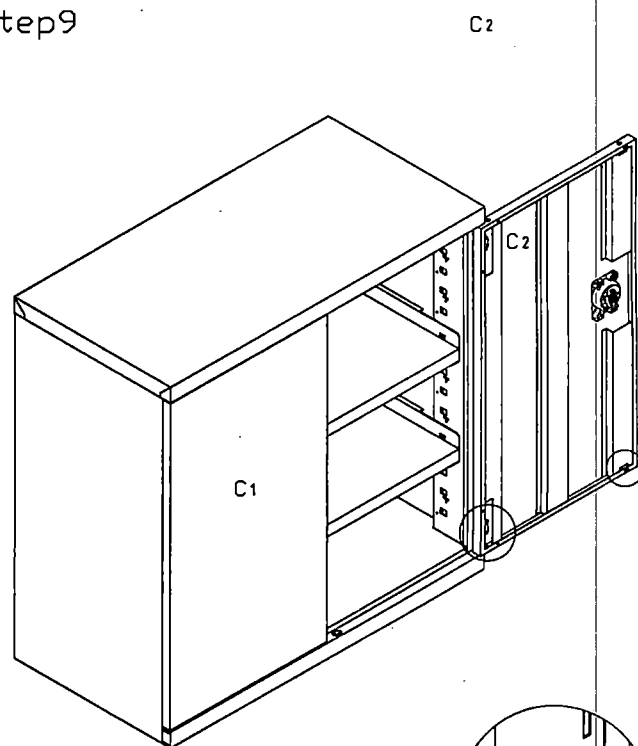

step8

